





NEOSTAR 54 Cell – Gen3 Infinite

Extended Clamping Zone

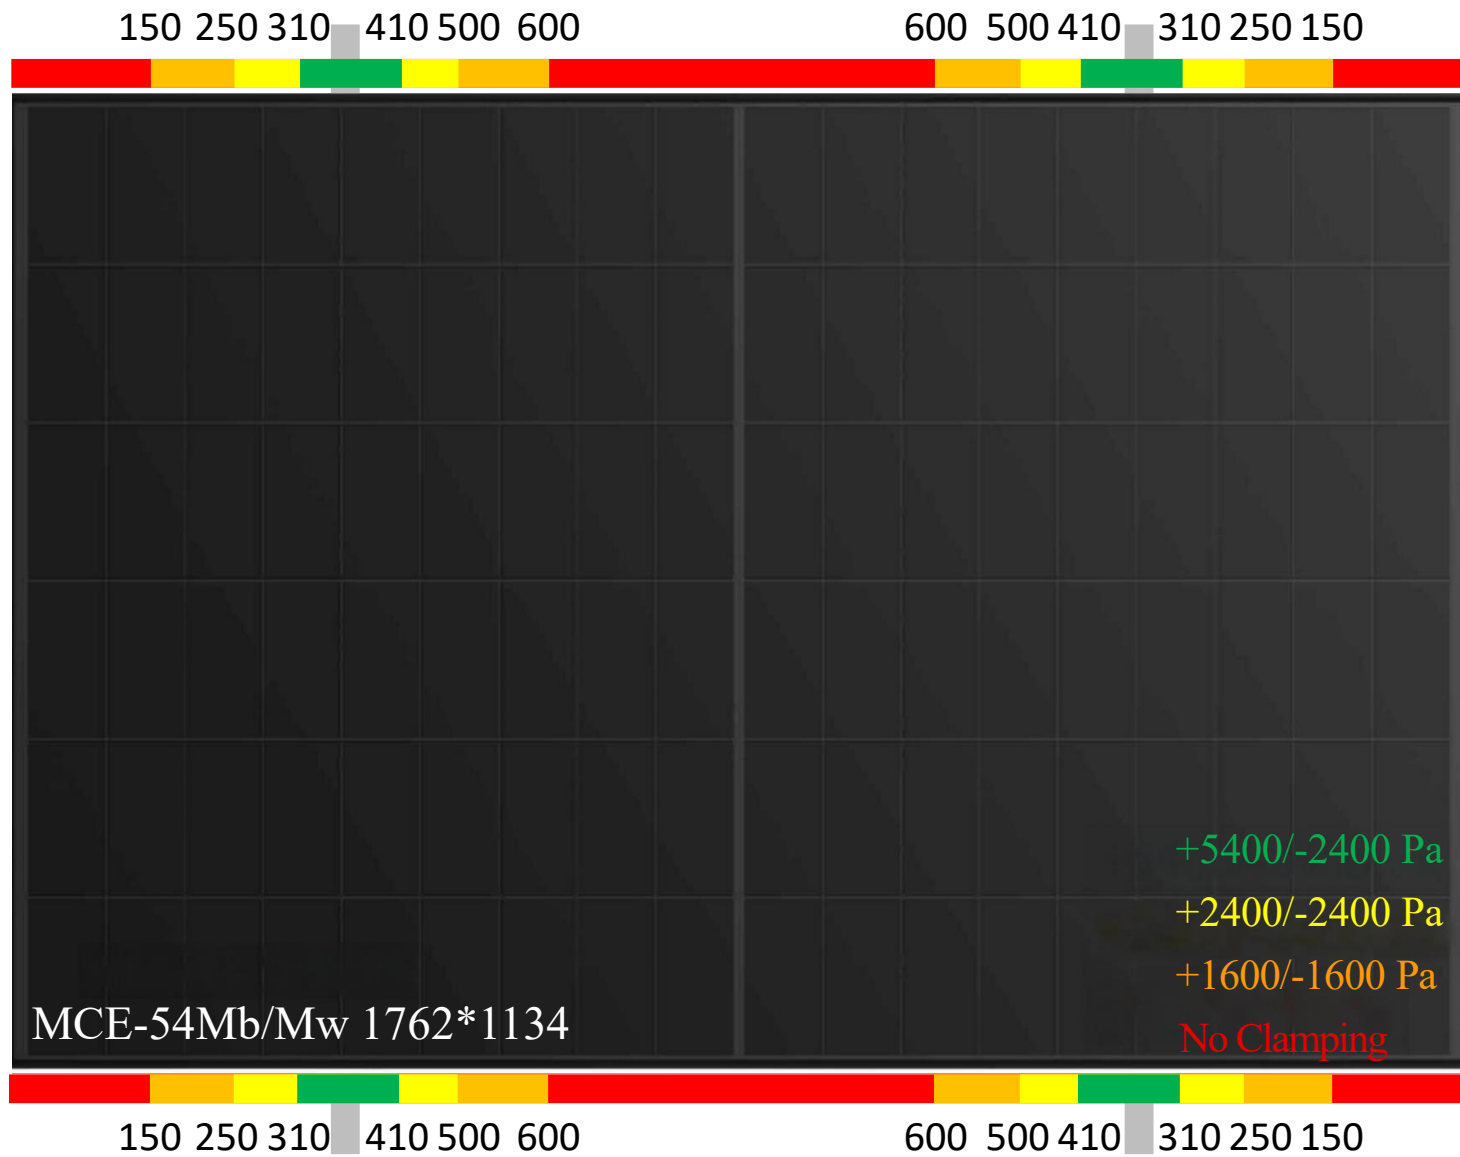


This load graph present when the purlin cross the long frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

This load graph present when the purlin cross the short frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

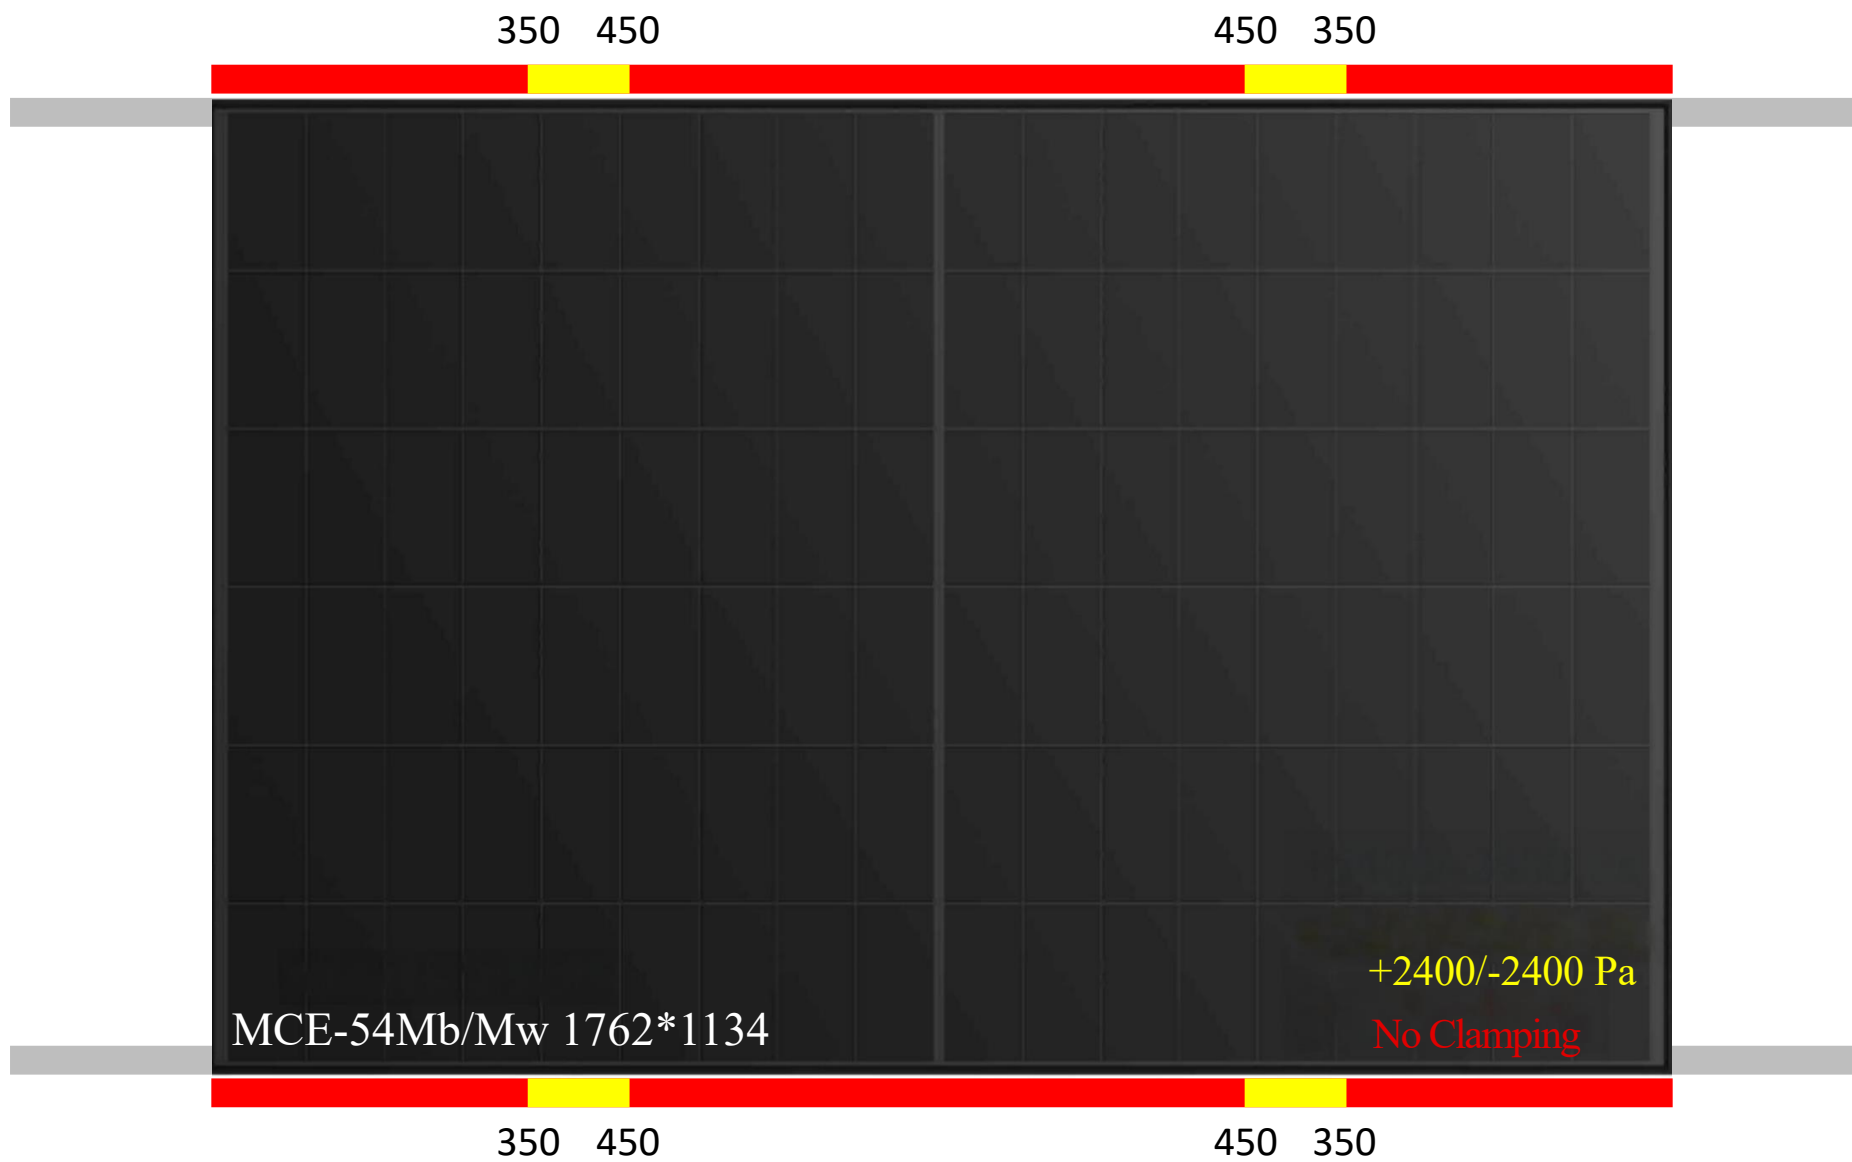

This load graph present when the purlin parallel to the long frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

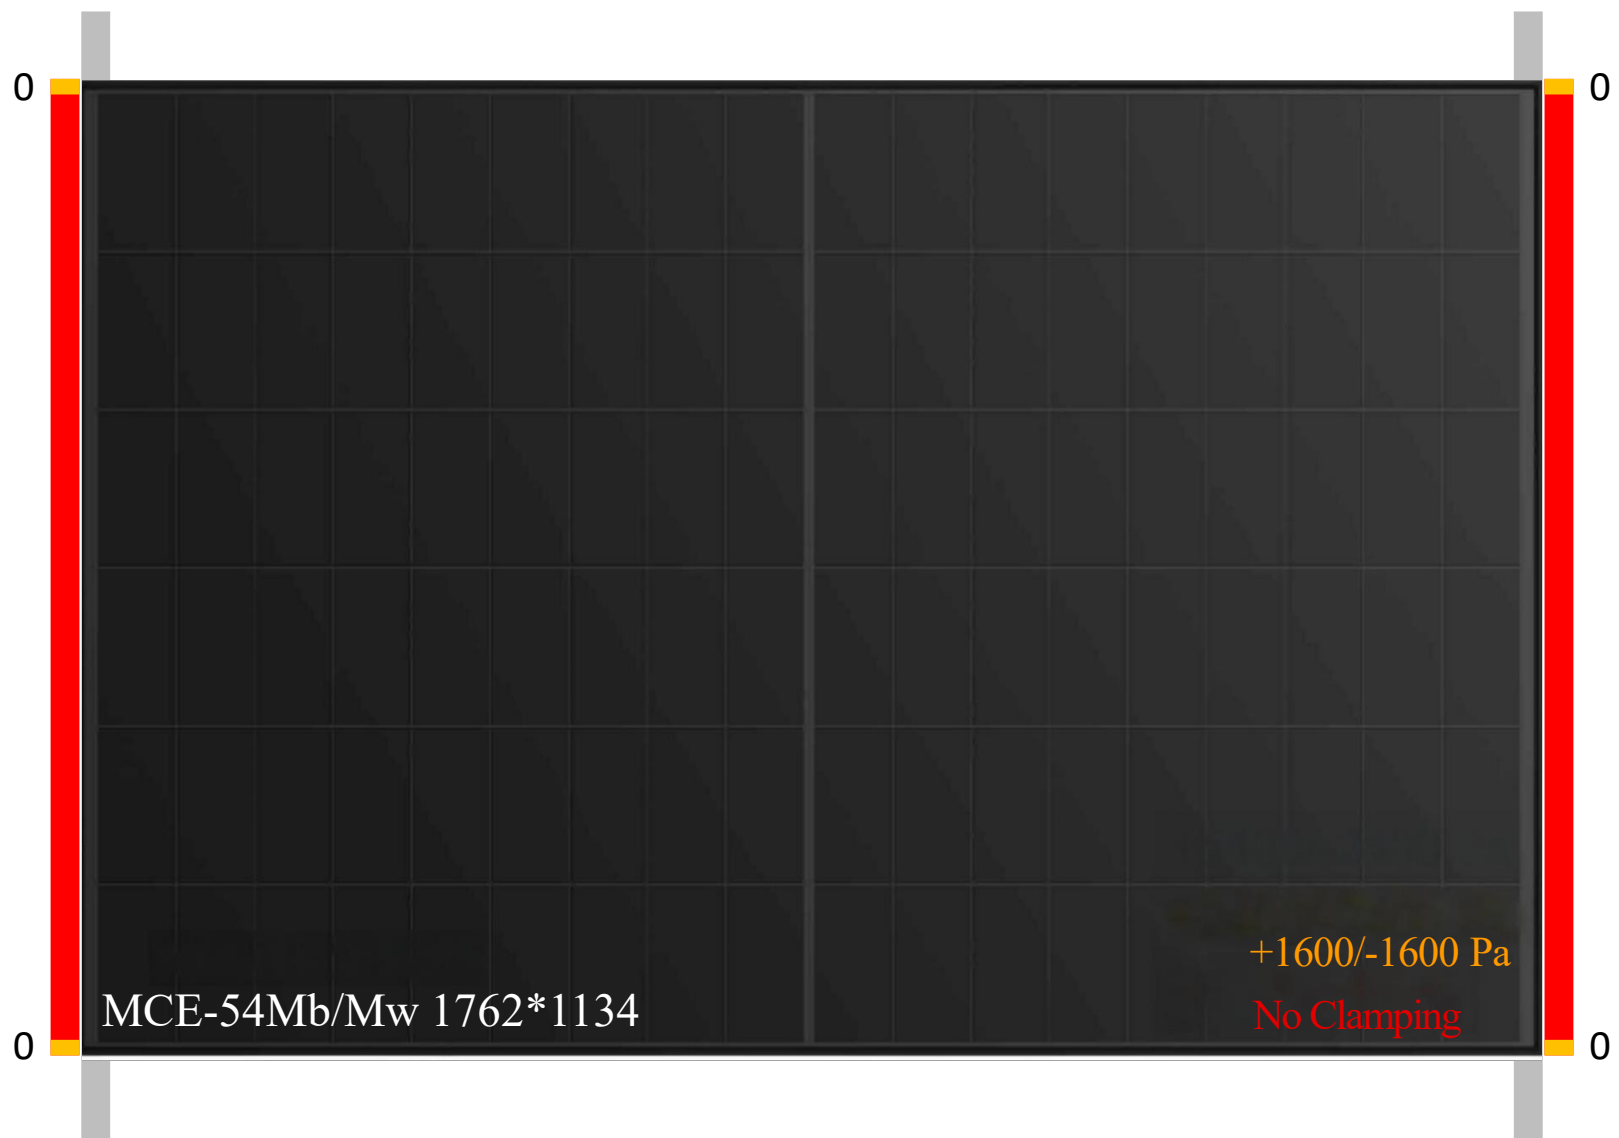

This load graph present when the purlin parallel to the short frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm